

QUALITY OILWELL CEMENTING, INC.

Federal Tax I.D.# 20-2886107


Phone 785-483-2025
Cell 785-324-1041

Home Office P.O. Box 32 Russell, KS 67665

No. 4704

Date	1-4-11	Sec.	53	Twp.	R3	Range	19	County	Ellis	State	KS	On Location		Finish	4:45 p.m.
Lease	Becky Bull	Well No.	1-333	Location 1831-Scheuchchen Colby State											
Contractor	D. Scovell #4														
Type Job	Surface														
Hole Size	12 1/4														
Csg.	8 5/8														
Tbg. Size															
Tool															
Cement Left in Csg.	10.73														
Meas Line	Displace 7936														
EQUIPMENT															
Pumptrk	No.	Cementer	Dai's												
Bulktrk	No.	Helper	Paul / Keith												
Bulktrk	No.	Driver													
Bulktrk	No.	Driver	Sean												
JOB SERVICES & REMARKS															
Remarks:															
Rat Hole															
Mouse Hole															
Centralizers															
Baskets															
D/V or Port Collar															
8 5/8 Ben Anthony Fst. Circulation Mix 4505K + D Splice Cement Coked Handling 472 Mileage Guide Shoe Centralizer 1 8 5/8 Rubber Plug Baskets 1 Rubber Plate AFU Inserts Float Shoe Latch Down Pumptrk Charge Logy Surface Mileage 17															
														Tax	
														Discount	
														Total Charge	

X Signature *Michael D. Scovell*

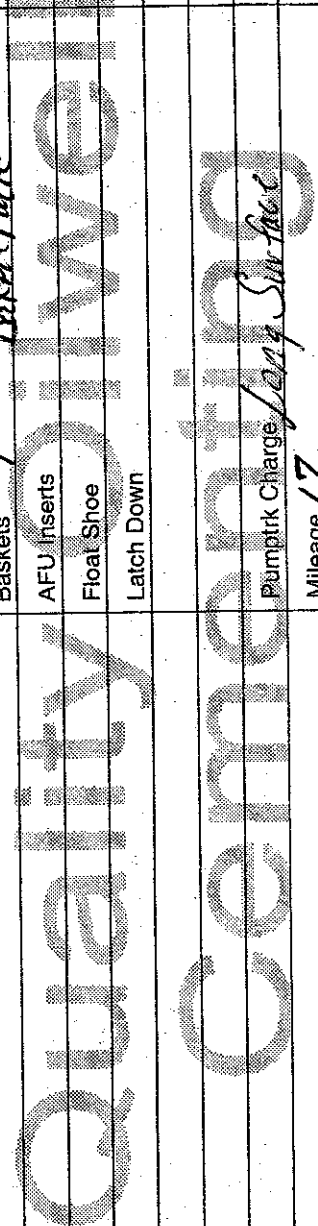

JOB LOG

SWIFT Services, Inc.

DATE 11-18 PAGE NO.

CUSTOMER Chart No.	WELL NO.	LEASE	JOB TYPE	TICKET NO.		PUMPS		VOLUME (BBL)(GAL)	RATE (BPM)	TIME	PRESSURE (PSI)		DESCRIPTION OF OPERATION AND MATERIALS
				1	2	TUBING	CASING						
Dawson & Nelson	1-33	Cecelia Brill	Concut 5 1/2" Longstring	19386	19386								On location w/ F.E. Rig LD D.C.
													Start 5 1/2" 14 #/ft. casing
													PKR shoe - Latex Down Battle
													55-20 1/2' - Concut 1-3-5-7-9-11
													Jt's out # 4 - 40 - 457
													Tag bottom - Pull up 8' off Bottom to 3618'
													Start cut casing.
													The wire pump not working - call BR
													another job
													TK on loc - set up
													Disp PKR shoe ball Regent. oil
													Pressure up - back to PT.
													Set PKR shoe
													Plug RH/320 to cut M.H/15 sto cut
													Start M.F. Test
													Start KCL flush
													Fin. Plug shoe - Start 135 sto EM-2 cut
													Fin. cut - Wash Plug Lines
													Drop L.D. Plug
													Start Diapl
													Plug Down - Seal - Release to Hold
													Job Complete
													Washup & Backup
													Thanks Alan & Doug & Dave E
													Alonso & J.R.